

Configuring Love and Automation Direct SOLO controllers

Getting into Setup Mode:

- 1. Hold the **set** or **D** button for at least 3 seconds and then release.
- 2. Use the 🖸 button to cycle through settings until you reach the **CoSH** setting.
- 3. Use the Up or Down arrows to select the parameter settings that match the list to the right. Using the 🖸 button cycle through the rest of the settings until complete.

Note: ****C*-*no setting is the one parameter that changes* for each controller. This is an important identifier for each controller and each controller requires a unique number. *Typical setup starts at 1 thru however many controllers you* have in your cellar.

<u>Dwyer-Love</u>
Compatible Series :
4B, 8B, 16B, 32B

Automation Direct

Compatible Series : SOLO 4824, 4848, 4896, 9696

Controller Settings:	Controller Settings:
CoSH – on	CoSH – on
C-SL - rtu	C-SL - rtu
C-no - ***	C-no - ***
bPS – 9600	bPS – 9600
Len – 8	Len – 8
PrTY – nonE	PrTY – nonE
StoP – 1	StoP – 1

Refer to your controller manufacturers users for more information if needed. (links to their users manuals are listed on our SUPPORT site)